



RECYCLE YOUR OLD FLEXIBLE PVC WITH US!


Clearway's Flexible PVC Recycling Programme makes recycling PVC waste simple and rewarding. After making a purchase on our website, simply send your old PVC strip curtains to our warehouse, and we'll take care of the recycling for you. Your old flexible PVC will be reused to create new PVC products, helping to reduce waste and keep it from going into a landfill. Plus, we'll reward you a £25 voucher for partnering with us to minimise flexible PVC waste! Find out more on our website or by scanning the QR code below.



Scan this QR code to learn more about our Recycling Program



CONTACT US FOR MORE INFO

 **Clearwayonline Head Office, Unit J2,
Carlton Drive Pen-Y-Fan Industrial Estate,
Crumlin, Gwent, NP11 4EA, UK**

 **0300 373 0196**

 **sales@clearwayonline.co.uk**


 **www.clearwayonline.co.uk**




Scan this QR code for an Installation Video Guide



STRIP CURTAIN INSTALLATION GUIDE

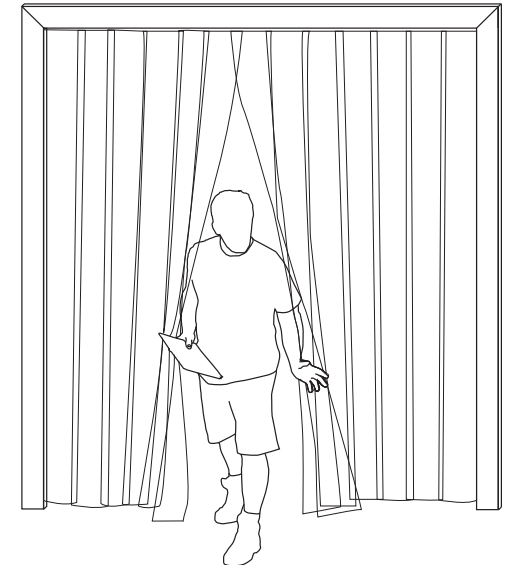


1 MEASURE THE DOORWAY

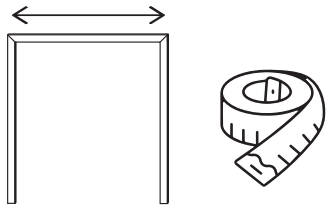


Measure the width of your doorframe/opening to double check the rail you ordered fits correctly.

2 TRIMMING THE RAIL




If the rail is too long and doesn't fit correctly, you may need to trim it to the size of the opening.

3 HANGING METHODS



Face Fix

The rail should sit flush on the wall and overhang slightly if you choose this option




Lintel Fix


The rail should sit flush on the underside of the opening if you choose this option

4 HANG RAIL CORRECTLY

If you have chosen to Face Fix your rail, fix your rail above the doorway frame or opening as the diagram indicates. Ensure that the rail over hangs.



If you have chosen to Lintel Fix your rail, fix your rail to the top of the doorway frame or opening as the diagram indicates. Make sure the rail is flush with the lintel in the opening.




5 MAKE SURE THE RAIL IS LEVEL



Make sure the rail is fitted correctly and is level.



6 HANGING THE STRIPS

Once the rail is fitted correctly, you can begin hanging the PVC strips. Place them as indicated in the diagrams, ensuring to adhere to the overlap that you purchased.

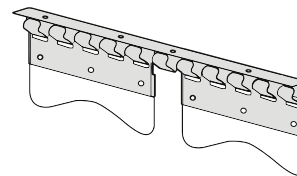

7 OVERLAPPING THE STRIPS

Once the first layer of strips have been placed on the rail (fig 1), you will need to add a secondary layer to add an overlap (fig 2). This ensures that the doorway is properly insulated, keeping the doorway protected from the elements.

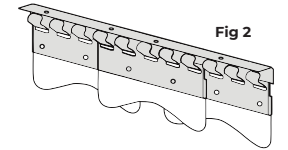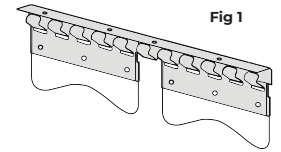

Make sure to turn the top layer (secondary layer) of strips as indicated in the diagram below. This prevents the strip curtains from curling and ensures a better seal, ensuring that the doorway is properly insulated.



We use a maximum and minimum overlap amount. When placing strips, make sure to use the overlap amount that you chose when purchasing the strips. See the diagram for guidance if you require assistance.

