



RECYCLE YOUR OLD FLEXIBLE PVC WITH US!


Clearway's Flexible PVC Recycling Programme makes recycling PVC waste simple and rewarding. Just send your old PVC strip curtains to our warehouse, and we'll take care of the recycling for you. Your old flexible PVC will be reused to create new PVC products, helping to reduce waste and keep it from going into a landfill. Plus, we'll reward you a £25 voucher for partnering with us to minimise flexible PVC waste!



Scan this QR code to learn more about our Recycling Program



CONTACT US FOR MORE INFO

 Clearwayonline Head Office, Unit J2,
Carlton Drive Pen-Y-Fan Industrial Estate,
Crumlin, Gwent, NP11 4EA, UK

 0300 373 0196

 sales@clearwayonline.co.uk


 www.clearwayonline.co.uk




Scan this QR code to visit the Clearway website



INSTALLATION GUIDE

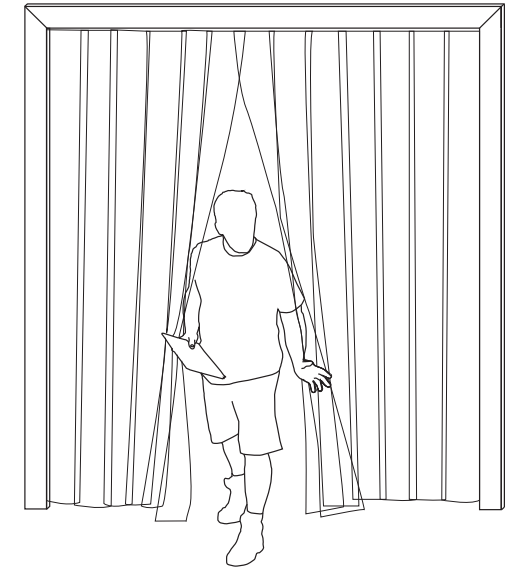


1 PREPARE THE PVC ROLLS

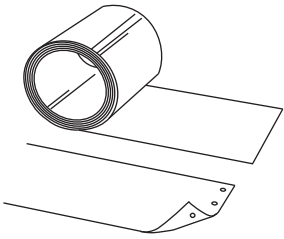


Complete the following steps according to the PVC you received. The instructions will depend on whether you ordered a normal unprepared roll or Quickmount ready strips. Pre-prepared strips will already have holes cut into the PVC for you. If you ordered pre-prepared PVC strips, then skip to step 5.

2 UNROLL THE PVC ROLL

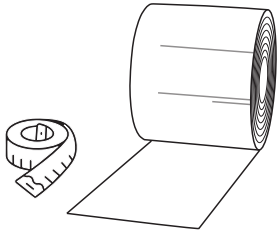


If you bought the Quickmount system with unprepared PVC rolls, you will need to unroll the PVC roll to the length of the strips you require. This will be the height of the door.

3 CUT THE ROLL INTO STRIPS

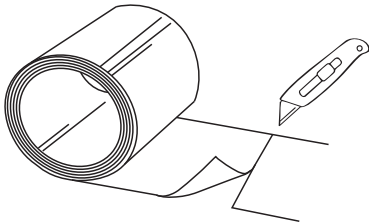

Use a stanley knife to cut the strips to the measured length for your doorway and prepare them for the next step.


4 MAKE HOLES IN THE PVC STRIPS

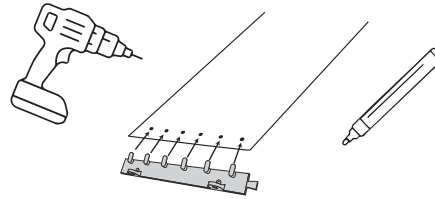


Once the roll is measured to the correct length, you'll need to create the holes in the PVC strips. Simply place the PVC strip over the Quickmount hanging rail, as it would be hung and mark where the holes should be with a marker. Once you are happy with the placement of the holes, remove the rail and simply drill the holes into the PVC with a drill. Ensure that the distance from the top of the strip to the holes is the same on all strips.

5 QUICKMOUNT HANGING METHODS

Now you'll have to hang the rail, choosing one of two hanging methods, face fix or lintel fix. Ensure that the rail is level with the doorway by using a spirit level.

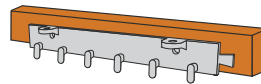

Face Fix

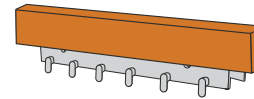

Lintel Fix

The Quickmount rail should sit flush on the wall and overhang slightly if you choose this option

The Quickmount rail should sit flush on the underside of the opening if you choose this option


6 MAKE SURE THE RAIL IS LEVEL




Make sure the rail is fitted correctly and is level.

7 HANG RAIL CORRECTLY

If you have chosen to Face Fix your rail, fix your rail above the doorway frame or opening as the diagram indicates. Ensure that the rail overhangs.

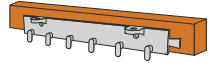


If you have chosen to Lintel Fix your rail, fix your rail to the top of the doorway frame or opening as the diagram indicates. Make sure the rail is flush with the lintel in the opening.

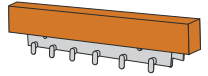

8 HANGING THE STRIPS

Once the rail is fitted correctly, you can begin hanging the PVC strips. Place them as indicated in the diagrams, ensuring to adhere to the overlap that you purchased.

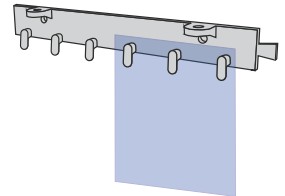

Make sure to turn the top layer (secondary layer) of strips as indicated in the diagram below. This prevents the strip curtains from curling and ensures a better seal, ensuring that the doorway is properly insulated.



When adding the additional strips, ensure to overlap the strips in order to create a airtight seal. This will prevent air from passing through and will insulate the doorway correctly

